Setup Guide — VSW 2VGA A

This guide provides basic instructions for an experienced installer to set up and operate the Extron VSW 2VGA A.

IMPORTANT: Refer to www.extron.com installation and installation complete user manual and instructions before connecting the instructions before connecting product to the power source.

Installation

Step 1 — Mount the unit


Turn off or disconnect all equipment power sources and mount the switcher (if applicable) in a rack shelf, under furniture, or through furniture. See the user's manual for details.

Step 2 — Power connector wiring

Wire the power connector as shown to the right.

CAUTION

When connecting the power supply, voltage polarity is extremely important. Applying power with incorrect voltage polarity could damage the power supply an dhte VSW 2VGA A. See the user's manual for additional cautions and notes.

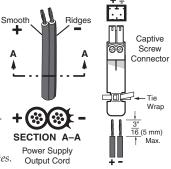


Step 3 — Example configurations


The switcher can be configured in a single switcher or a daisy chained configuration.

NOTE


The Extron VSW I AAP interface can be used in conjunction with the switcher. See the user manual for details.

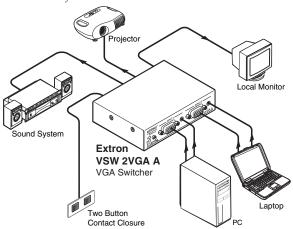

Single switcher configuration

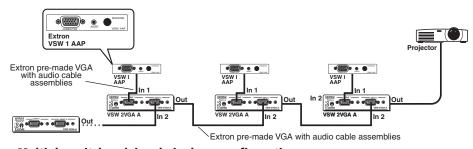

Setup Guide — VSW 2VGA A

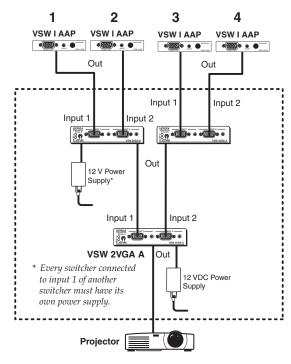

Multiple switcher daisy chain: tree configuration

Step 4 — Input selection

The switcher's inputs are selected using the front panel's Input Select toggle switch (shown on the right) or the rear panel's 3-pole Contact closure/Autoswitching captive screw connector (shown below).



Move the Input Select toggle switch up to select input 1; move it down to select input 2.



AUTO-SW



Connect a contact closure device to this captive screw connector.

- Pin 1 selects input 1 when momentarily connected to ground (pin 3).
- Pin 2 selects input 2 when momentarily connected to ground (pin 3).
- Pin 3 connects to the ground wire (equipment ground).

NOTE

Simultaneously connecting both pins 1 and 2 to ground (pin 3) using a contact closure device turns autoswitching mode on. The Input Select toggle switch is disabled in Autoswitch mode.

+800 Inside	tron USA - West	Extron USA - East	Extron Europe	Extron Asia	Extron Japan	Extron China	Extron Middle East	
	adquarters 10.633.9876	+800.633.9876 Inside USA / Canada Only	+800.3987.6673 Inside Europe Only	+800.7339.8766 Inside Asia Only	+81.3.3511.7655 +81.3.3511.7656 FAX	+400.883.1568 Inside China Only	+971.4.2991800 +971.4.2991880 FAX	68-1111-50
	e USA / Canada Only	+1.919.863.1794	+31.33.453.4040	+65.6383.4400		+86.21.3760.1568		Rev. A
+1.714.491.1500 +1.714.491.1517 FAX		+1.919.863.1797 FAX	+31.33.453.4050 FAX	+65.6383.4664 FAX		+86.21.3760.1566 FAX		04 09