

1. Screens

The Screen Controls for all three screens (Left, Middle, and Right) are located on the wall next to the door. Press the **DOWN ARROW** on the Screen Control for screen to come down. Press the **UP ARROW** on the Screen Control for screen to go up.

2. Projectors

A single Control Panel for all three projectors is located on the wall next to the door.

Power-On

1. Press the **PROJ ON** button on the Projector Control.
2. The projectors start warming up and the STATUS indicator on all projectors will start blinking.
3. While the STATUS indicator is blinking, no other buttons on the Projector Control work.
4. It may take about one minute for the lamp to light up and the blinking status on the projectors to turn solid green. Be Patient and Wait!

Power-Off

1. Press the **PROJ OFF** button on the Projector Control. The message “Power Off? Press again” appears on the screen.
2. Press the **PROJ OFF** button on the control panel within 10 seconds again.
3. The lamp will go out and the STATUS indicator on all projectors will start blinking.
4. While the STATUS indicator is blinking, no buttons on the Projector Control work.
5. It may take up to three minute for the projector to cool down and for the blinking status to stop blinking. You must wait for the projector to cool down, before being able to power it on again. Be Patient and Wait!
6. The lamp may deteriorate if the projector is powered off and on repeatedly within 30 minutes after the lamp is lighted.

3. Selecting Inputs

Built-in Computer

1. Press the **PC** button on the Projector Control.
2. Turn on the built-in computer.
3. Log on using the special user name and password.
4. Make sure your laptop **is not** connected to the podium. If it is not connected, then the system automatically selects the built-in computer.

Laptop

1. Press the **PC** button on the Projector Control.
2. Turn on your laptop computer.
3. Press Function key F7 or any other Function keys to send the video signal from your laptop to the projector.
4. Make sure your laptop **is** connected to the podium. If it is connected, then the system automatically selects the laptop computer.

Document Computer

1. Press the **DOC CAM** button on the Projector Control.
2. Turn on the document camera.

DVD/VCR Player

1. Press the **DVD/VCR** button on the Projector Control.
2. Turn on the DVD/VCR player.
3. Press the SOURCE button on the player to toggle between VCR and DVD.
4. Press the PLAY button to play.
5. Press the EJECT button, located between the VCR and DVD, to eject the DVD disk. This button does not eject the VCR
6. To eject the VCT tape, press the STOP/EJECT button, located under the VCR tape slot.

Trouble Shooting

Problem with Document Camera: When you press the ON/OFF button on the document camera and hold it down, it does not turn off and stays on

Resolution: Just touch the ON/OFF button on the document camera quickly and do NOT hold it down. The button toggles between the ON and OFF status by a quick touch.

Contact:

Abbas Ahmadi

AbAhmadi@ucdavis.edu

(530) 752-5886

Further Information

For more information about the AV system in this classroom, visit the web site for 1420 Meyer classroom at:

http://animalscience.ucdavis.edu/help/Classroom_Technology/1420_Meyer/index.htm